

ionmax<sup>+</sup>

# High-Performance HEPA UV Air Purifiers





## Ionmax+ Aire High-Performance HEPA UV Air Purifier


- Ideal for living spaces up to 234m<sup>2</sup>
- 99.97% removal of all particles in the air measuring 0.3 microns in diameter
- True HEPA H13 filter
- PM2.5 Particle Monitor Display
- WiFi enabled App Control (iOS & Android)
- Touch Control Panel
- Timer up to 12 hours, Auto Off
- Air Quality Indicator Lights in 4 Colours
- Air filter replacement alert
- Child-lock function

**2** YEAR  
WARRANTY



Coverage Area	77m <sup>2</sup> (1) - 234m <sup>2</sup> (2)
CADR	900m <sup>3</sup> /h
Modes	4 fan speeds, Auto mode, Sleep mode
Power consumption	105W
Noise Level	35 ~ 66dB(A)
Net Weight	14.2 kg
Dimensions	370 x 396 x 691 mm

1) ANSI/AHAM AC-1 2015 2) NRCC-54013-2011

### 6 Stages of Purification

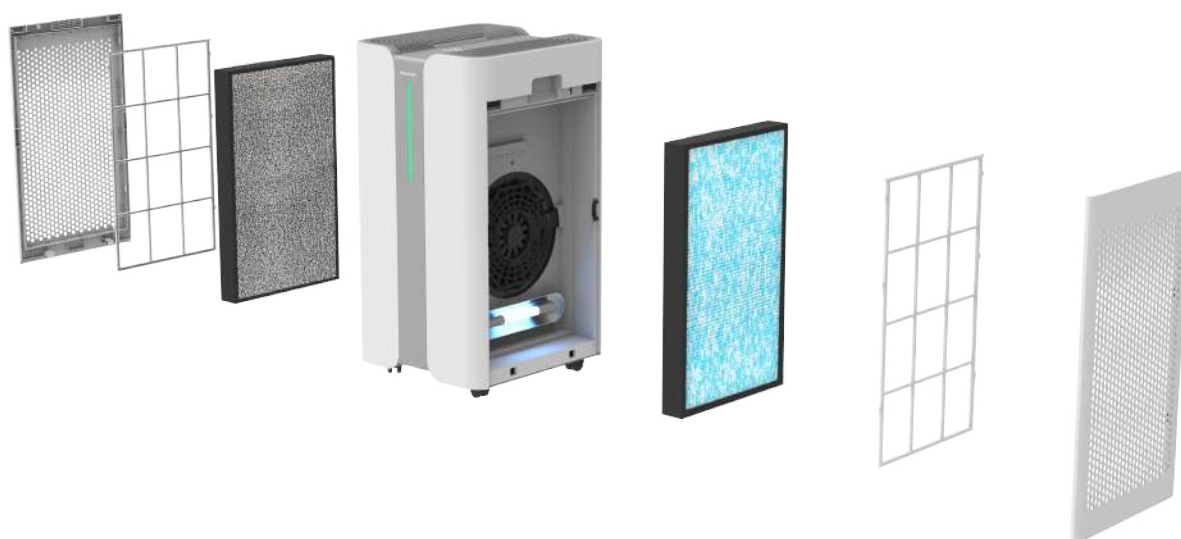

- 1 PRE-Filter**  
Traps large airborne particles, such as hair, dust, and pet dander.
- 2 Antibacterial HEPA H13 Filter**  
Captures 99.97% of microscopic allergens and germs as small as 0.3 microns from the air.
- 3 Activated Carbon Filter**  
Neutralises odours caused by smoke and VOCs.
- 4 TiO<sub>2</sub> Filter**  
Breaks down organic compounds such as VOCs through an oxidation process to remove odours from the air.
- 5 UVX-Shield**  
Inactivates viruses and bacteria through direct UV-C light exposure.
- 6 IonX-Shield**  
Releases negative ions into the surrounding air to help with the removal of airborne particles.

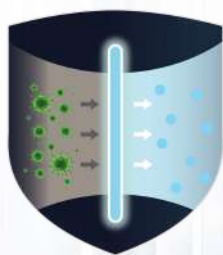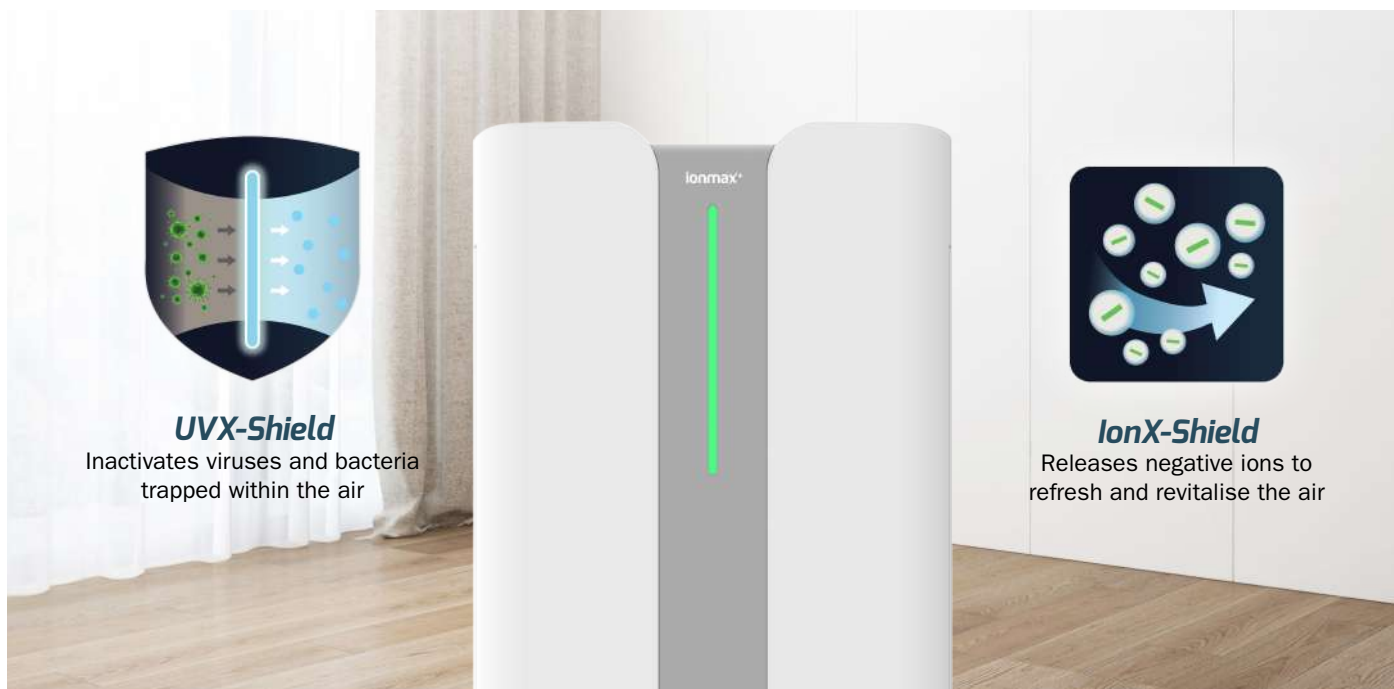

**UVX-Shield**  
Inactivates viruses and bacteria trapped within the air



**IonX-Shield**  
Releases negative ions to refresh and revitalise the air

**Air Quality Indicator Display**





**SmartSens**  
Lets you know your air quality through a PM2.5 dust particle level indicator

**Two-way Ventilation**



**WiFi Enabled App Control**

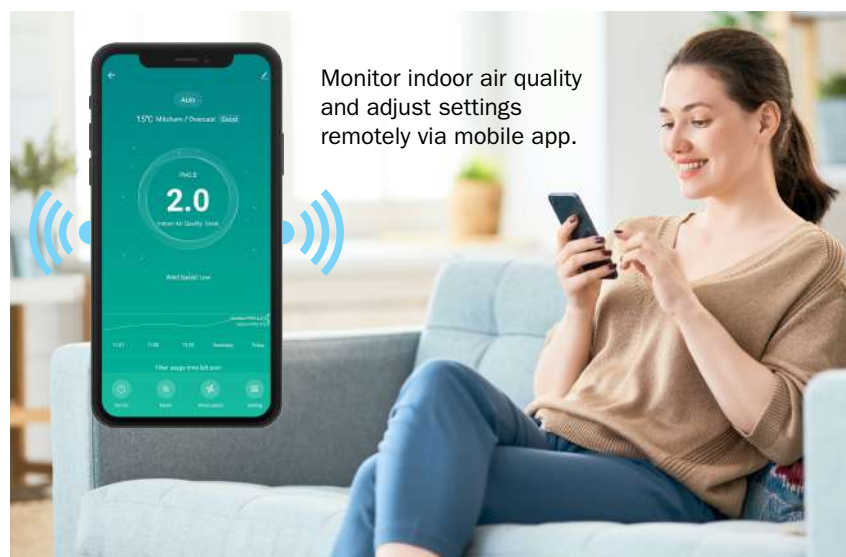

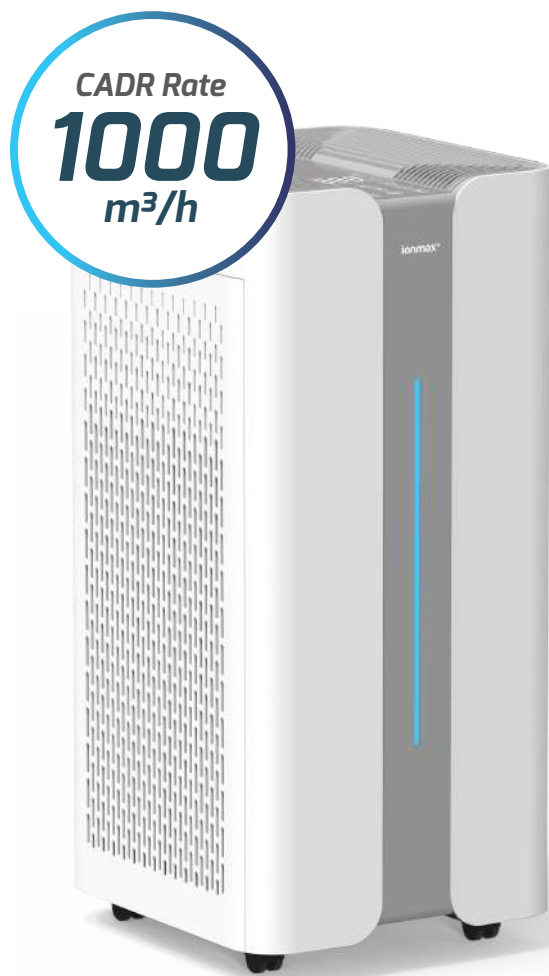

## Ionmax+ Aire X High-Performance HEPA UV Air Purifier

- Ideal for living spaces up to 260m<sup>2</sup>
- 99.97% removal of all particles in the air measuring 0.3 microns in diameter
- True HEPA H13 filter
- PM2.5 Particle Monitor Display
- WiFi enabled App Control (iOS & Android)
- Touch Control Panel
- Timer up to 12 hours, Auto Off
- Air Quality Indicator Lights in 4 Colours
- Air filter replacement alert
- Child-lock function

**2** YEAR  
WARRANTY


Coverage Area	85m <sup>2</sup> (1) - 260m <sup>2</sup> (2)
CADR	1000m <sup>3</sup> /h
Modes	4 fan speeds, Auto mode, Sleep mode
Power consumption	95W
Noise Level	35 ~ 66dB(A)
Net Weight	15 kg
Dimensions	370 x 400 x 796 mm

1) ANSI/AHAM AC-1 2015 2) NRCC-54013-2011

### 6 Stages of Purification



- 1 PRE-Filter**  
Traps large airborne particles, such as hair, dust, and pet dander.
- 2 Antibacterial HEPA H13 Filter**  
Captures 99.97% of microscopic allergens and germs as small as 0.3 microns from the air.
- 3 Activated Carbon Filter**  
Neutralises odours caused by smoke and VOCs.
- 4 TiO<sub>2</sub> Filter**  
Breaks down organic compounds such as VOCs through an oxidation process to remove odours from the air.
- 5 UVX-Shield**  
Inactivates viruses and bacteria through direct UV-C light exposure.
- 6 IonX-Shield**  
Releases negative ions into the surrounding air to help with the removal of airborne particles.

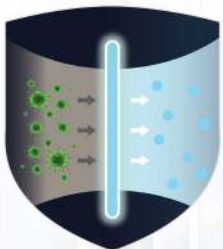

**UVX-Shield**  
Inactivates viruses and bacteria trapped within the air



**IonX-Shield**  
Releases negative ions to refresh and revitalise the air

**Air Quality Indicator Display**



**SmartSens**  
Lets you know your air quality through a PM2.5 dust particle level indicator

**Two-way Ventilation**



**WiFi Enabled App Control**



Monitor indoor air quality and adjust settings remotely via mobile app.



**Ionmax+ Aire**



**Ionmax+ Aire X**

<b>Room Size</b>	77 - 234m <sup>2</sup>	85 - 260m <sup>2</sup>
<b>CADR (m<sup>3</sup>/h)</b>	900m <sup>3</sup> /h	1000m <sup>3</sup> /h
<b>Air Flow</b>	Top	Top
<b>HEPA Filter</b>	H13	H13
<b>Ion-X Shield Ioniser</b>	Yes	Yes
<b>UVX-Shield Germicidal UV Light</b>	Yes	Yes
<b>Fan Speeds</b>	4	4
<b>SmartSens Air Quality Monitor</b>	Yes	Yes
<b>Air Filter Replacement Alert</b>	Yes	Yes
<b>Air Filter Replacement</b>	6 - 12 mths	6 - 12 mths
<b>Timer</b>	up to 12 hours	up to 12 hours
<b>WiFi App Control</b>	Yes	Yes
<b>Warranty</b>	2 years	2 years
<b>Dimensions</b>	370 x 396 x 691 mm	370 x 400 x 796 mm
<b>Weight</b>	14.2 kg	15 kg

**ionmax<sup>+</sup>**

[ionmax.com.au](http://ionmax.com.au)